



## Installation and setup


1. Download the Nordcad smart start installer here:  
[http://downloads.nordcad.dk/smartstart/Nordcad174SmartStart\\_Setup.exe](http://downloads.nordcad.dk/smartstart/Nordcad174SmartStart_Setup.exe)  
Username: **dlnordcad**  
Password: **iwantTHAThotfix**
2. Run the downloaded setup file. If Windows protected your PC click on “More info”

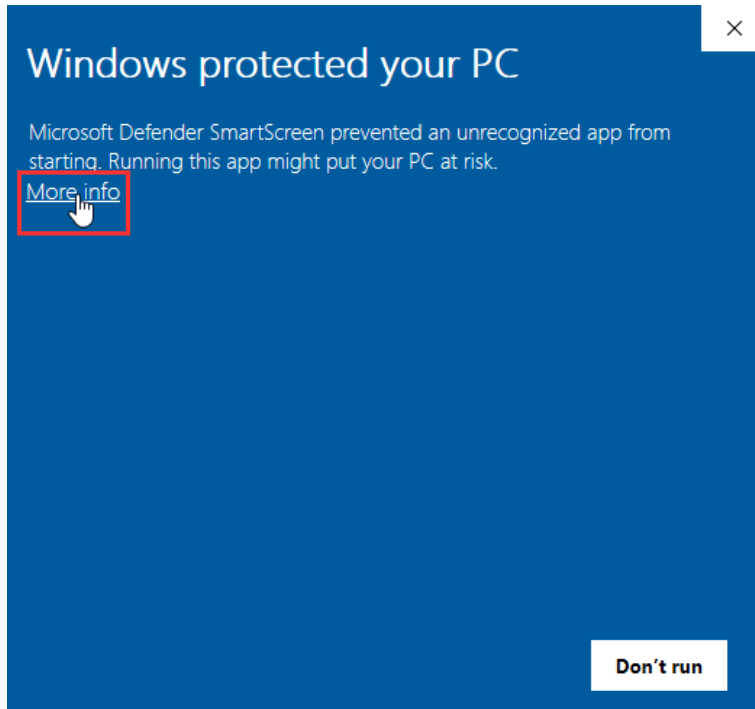


3. Click on Run anyway to start the installer.

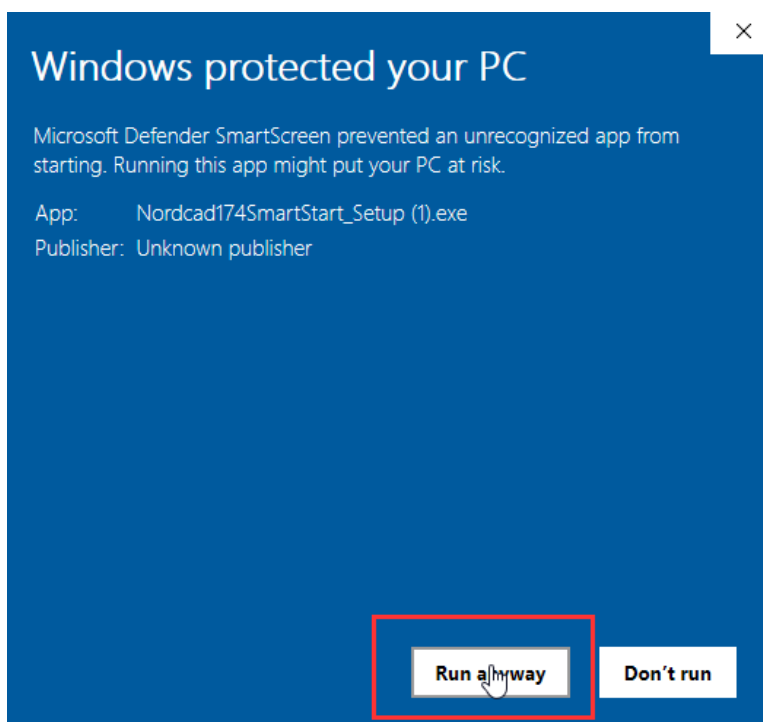


4. The installer will start to download from the internet.

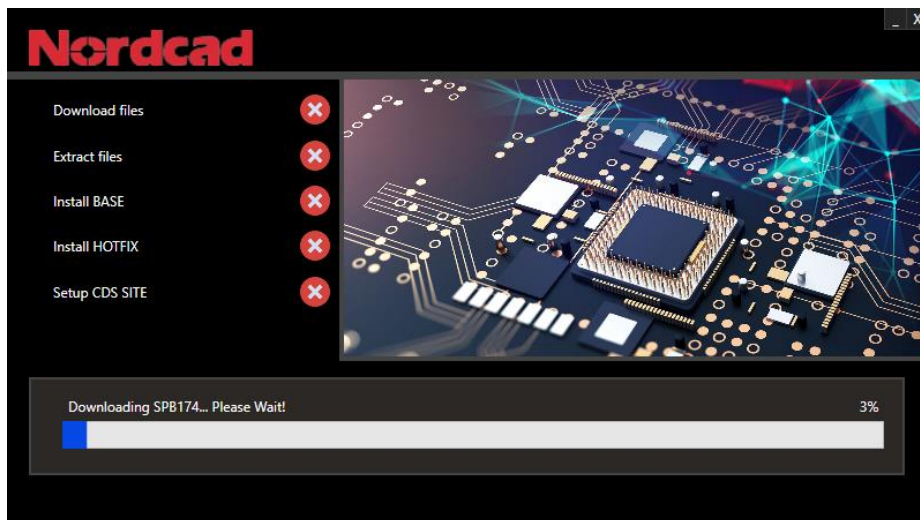


5. When the download is at 100% it will start extracting the files – Please wait.

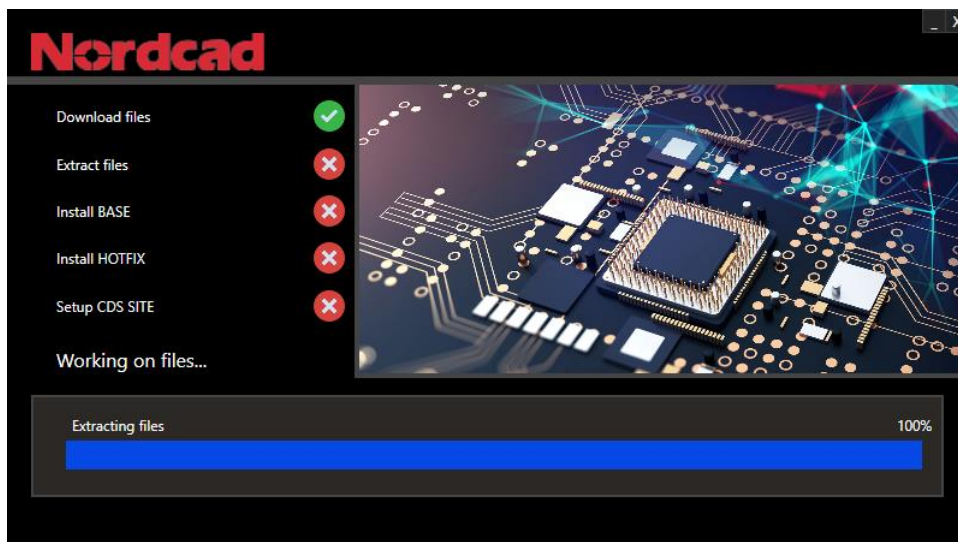


6. The BASE Cadence installation will then start. This will run as administrator. Select yes to the popup.

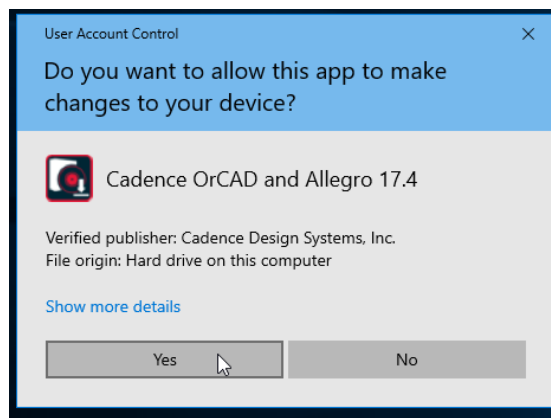

7. Accept the license agreement and click on Next. Click on Next again.

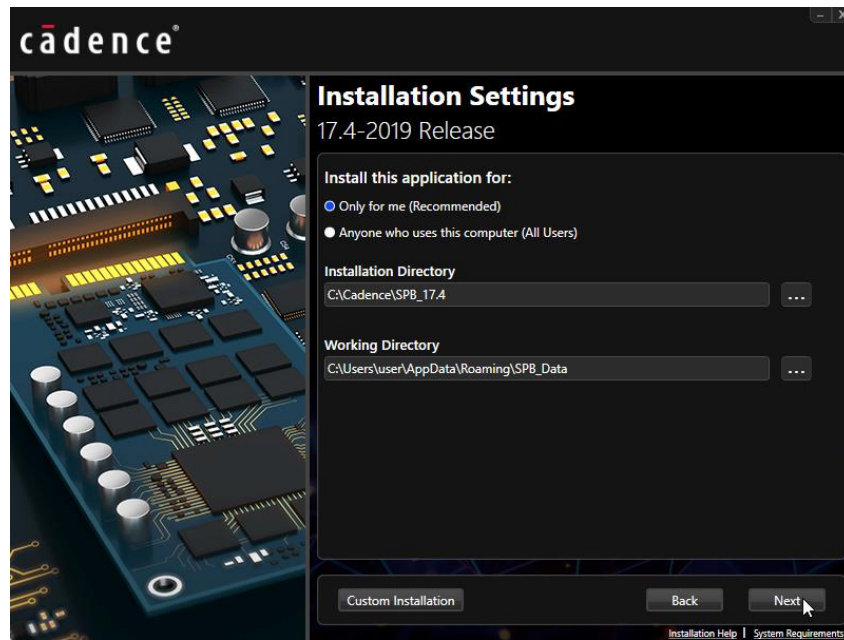


8. Navigate to your license file you received from Nordcad by clicking on the three dots ... Find the file and click on Open.

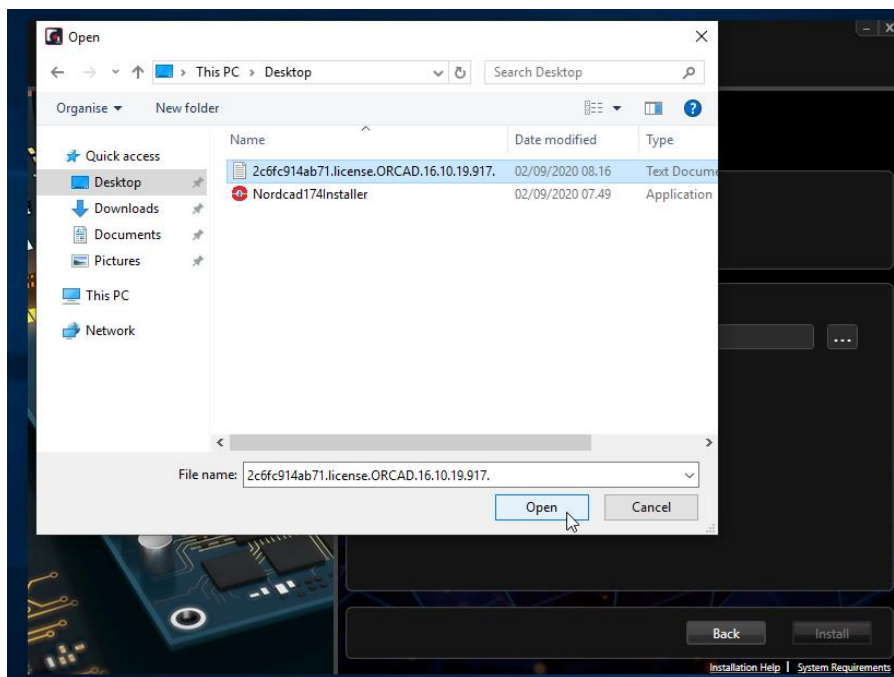




9. Click on Finish and the hotfix installation will then start. Select Yes to run the hotfix installation.

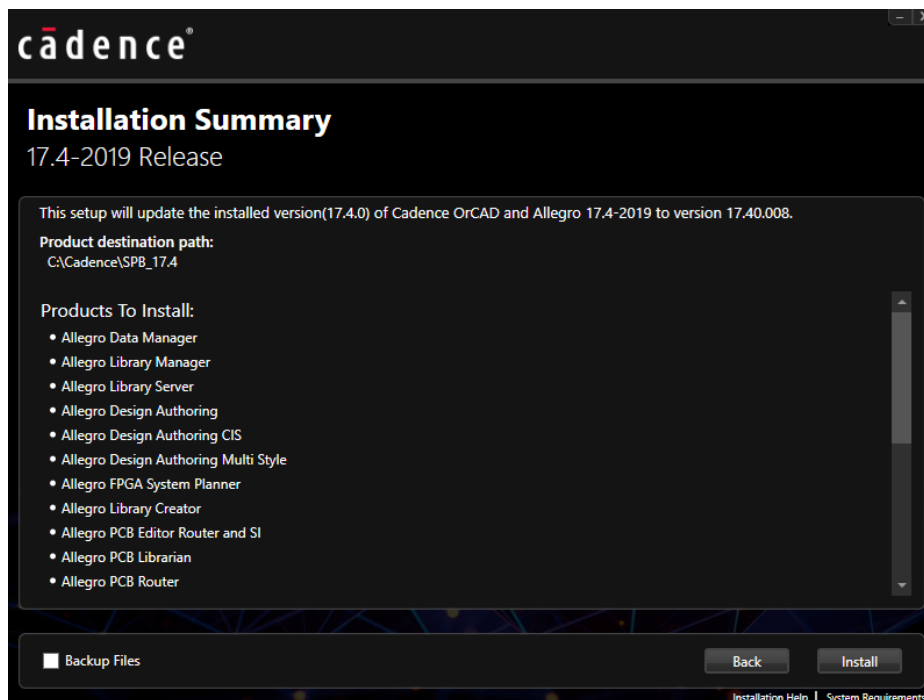

10. Click on Install and wait for the hotfix to complete.
11. Click on Finish when completed.
12. The installer will then setup the CDS\_SITE.
13. When the installation has been completed the screen will look like the following image.

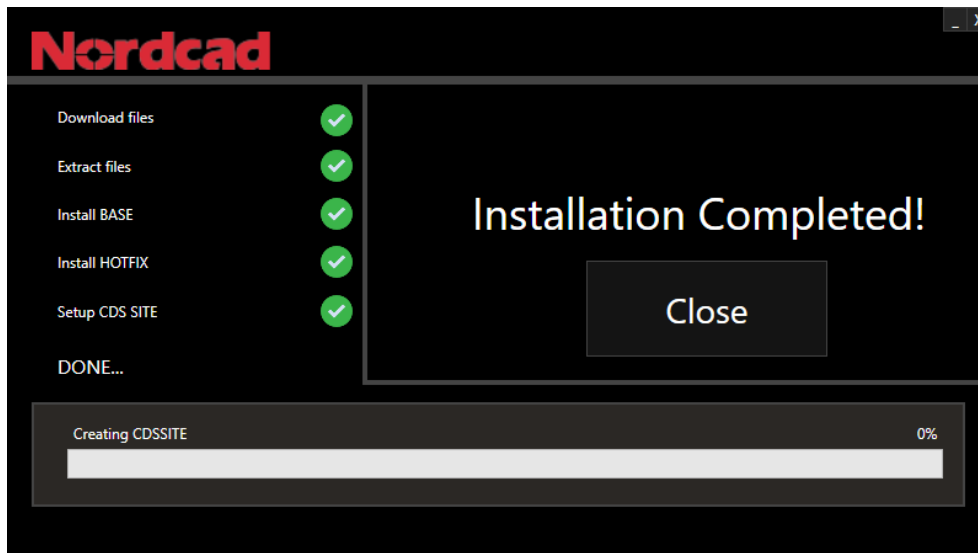

## Help with OrCAD



### YouTube Channel

Visit our YouTube channel, that contains a lot of different content for schematics in Capture, PCB Design and PSpice simulations.

<https://www.youtube.com/channel/UCes1TdH6mVgk-EJ0oTxAVnQ>



### License Manager

To install the license, use the license configuration tool as shown on this link:

<https://youtu.be/qtPHVsROW9A>